

1. Prepare a drop of Shower gel + 30ml pure water

2. Mix them and spraying to the surface of panel PC/monitor and film




3. Paste film to surface of PC or monitor



4. Pad with a sheet of other plastic and Scraping the water



5. Scarping the water carefully

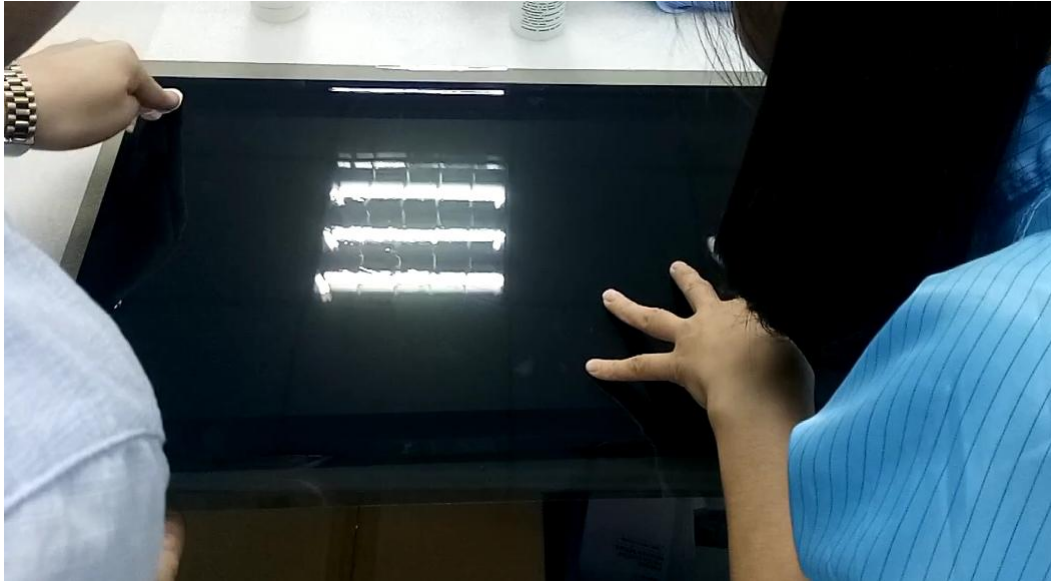

6. Cut out the excess



7. Finish